


Lofting Instructions

17th, Frontier, Sanford
metal stabilizer bar



HOUSING &
RESIDENTIAL LIFE

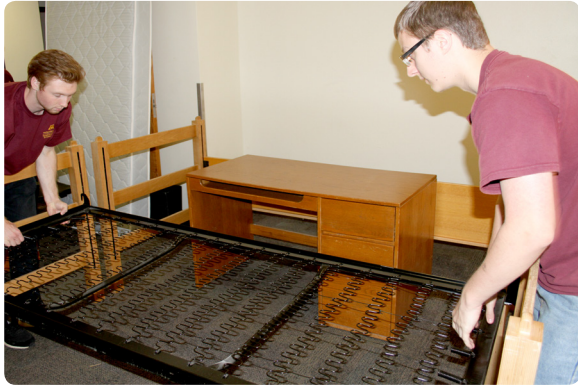

- 1 Remove mattress from frame and insure bed frame is secured in middle notch of bed ends.



- 3 Slide metal latches into bar, then secure bar in middle notch between both bed ends.



- 2 Slide latches into wooden bed ends.



- 4 Lift bed frame onto base.



- 5 Add mattress and safety rail.

Caution: Be careful not to hit the sprinklers while lifting the bed, and ONLY attempt with at least 2 people.

Need assistance? If you need something repaired or replaced in your room, submit a Fix It request: housing.umn.edu/FixIt