

Lofting Instructions

17th, Frontier, Sanford
wooden stabilizer bar




HOUSING &
RESIDENTIAL LIFE



- 1 Remove mattress from frame and insure bed frame is secured in middle notch of bed ends.



- 3 Attach stabilizer bar to bed ends facing inwards.

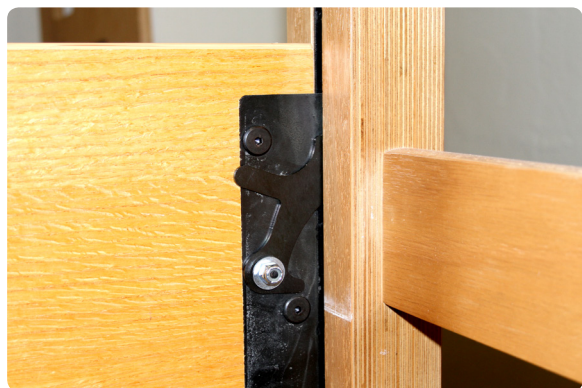

- 2 Lift latches to upward position.



- 4 Lift bed frame onto base.



- 5 Add mattress and safety rail.

Caution: Be careful not to hit the sprinklers while lifting the bed, and ONLY attempt with at least 2 people.

Need assistance? If you need something repaired or replaced in your room, submit a Fix It request: housing.umn.edu/FixIt