


# Lofting Instructions

17th, Bailey, Frontier, Sanford  
metal stabilizer bar



HOUSING &  
RESIDENTIAL LIFE

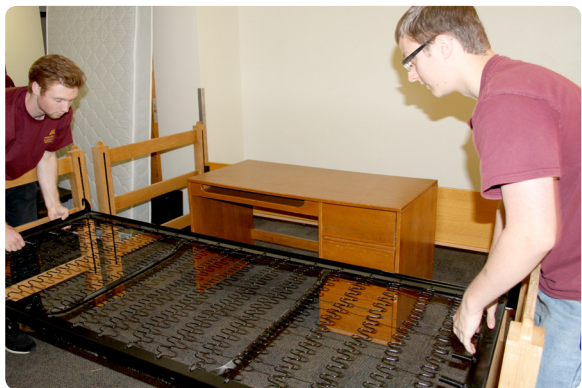

- 1** Remove mattress from frame and insure bed frame is secured in middle notch of bed ends.



- 3** Slide metal latches into bar, then secure bar in middle notch between both bed ends.



- 2** Slide latches into wooden bed ends.



- 4** Lift bed frame onto base.



- 5** Add mattress and safety rail.

**Caution:** Be careful not to hit the sprinklers while lifting the bed, and ONLY attempt with at least 2 people.

**Need assistance?** If you need something repaired or replaced in your room, submit a Fix It request: [housing.umn.edu/FixIt](https://housing.umn.edu/FixIt)