

LOFTING INSTRUCTIONS

BEFORE YOU BEGIN:


Make sure you have a **rubber mallet**, at least one other person to assist you (three people is recommended), and **enough space on either side of the bed** to move around.

CAUTION Avoid hitting sprinkler heads when moving items. This will cause severe damage.




1

Remove the mattress from the bed frame. Set aside, and out of the way.

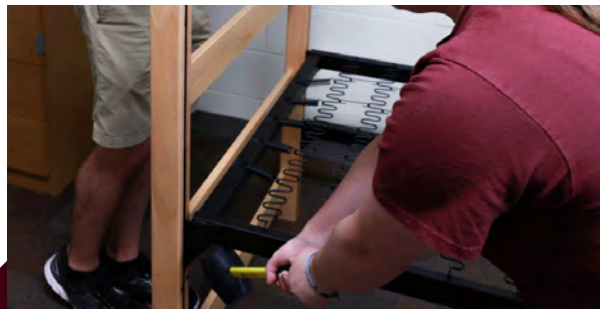


2

Using the rubber mallet, detach the bed spring hooks and stabilizer bar on one side of the bed.

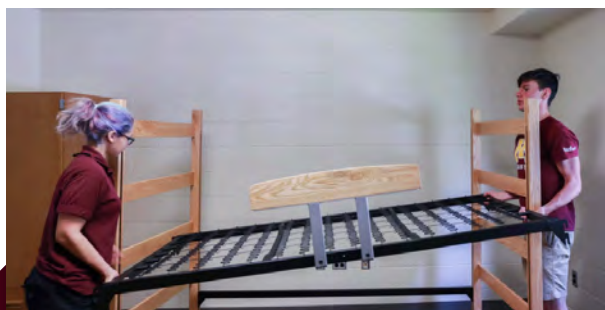


3

Detach the bed spring on the other side. Rotate the bed spring, and lift to a lofted position so that the safety rail is on the outer edge.

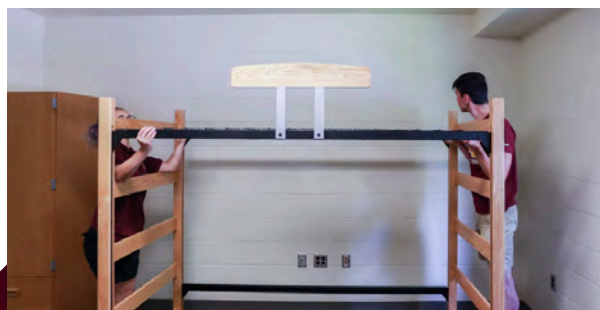


4

Place the bed spring hooks into the correct spot. Attach on all four sides.

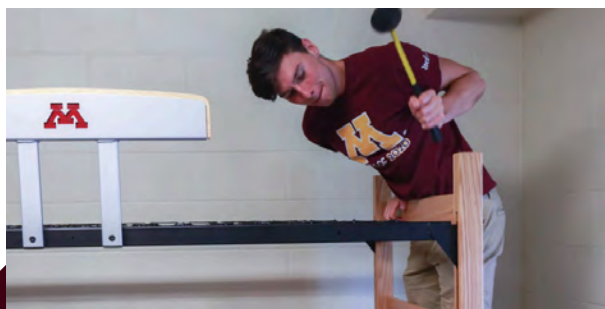

5

Using the rubber mallet, pound the bed spring into place, ensuring a secure fit. Then, place the mattress back on top.

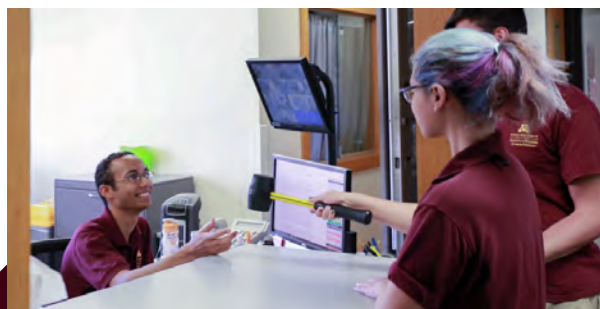

6

Finally, return the rubber mallet to the Information Desk or to the Community Advisor (CA) you borrowed it from.

Need assistance? Let us know by submitting a maintenance request via the Housing Portal at housing.umn.edu/portal.



**HOUSING &
RESIDENTIAL LIFE**